



Quick Start Guide


- To ensure correct and safe use, please read this manual carefully before installation.
- 55-98 inch IFP is recommended for this model product.
- This bracket can bear up to 110KG.

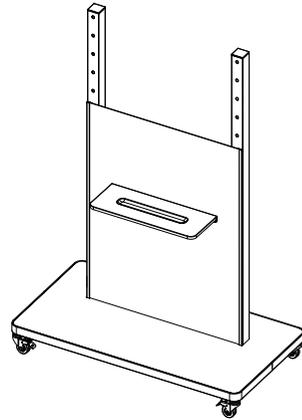


BOM




① A-base 1 pc

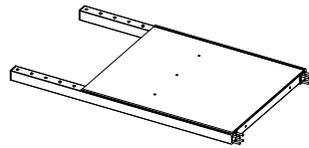

② Column assembly 1pc

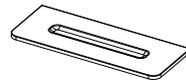

③ Tray 1pc

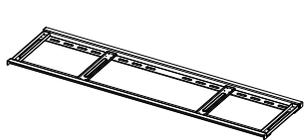

④ Wall-mounted board 1pc*



⑤ Wall-mounting hanging strip 2 pcs*



⑥ Casters 4pcs

a M12 Washer 4pcs 

b Cross-slot recessed external hexagonal head screw M8 x 40mm 4pcs 

c-1 M10 Hex nut M10 x 6mm 8pcs 

c-2 M10 Flat washer 8pcs 

c-3 M10 Washer 8pcs 

d Cross-slot recessed external hexagonal head screw M8 x 25mm 8pcs* 

e M6 Screw* M6 x 130mm 2pcs 

Cross screwdriver (Provide for oneself) 

Adjustable wrench (Provide for oneself) 

Note:* means that some models including accessories, will be subject to the actual production, due to the model difference.

Steps

Step 1

Adjust the casters to the brake state, and then tighten the 4pcs casters on the base. (As shown in Figure 1)

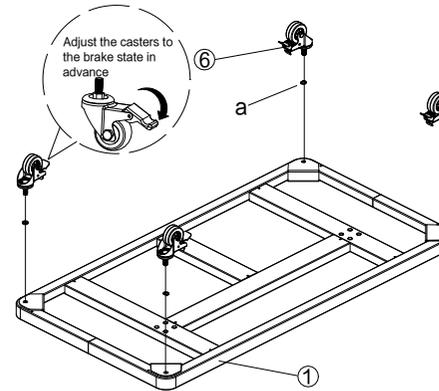


Figure 1

Step 2

Insert the column assembly on the base, and then use b to pass through the corresponding holes of the column assembly to base to lock the column assembly. (As shown in Figure 2)

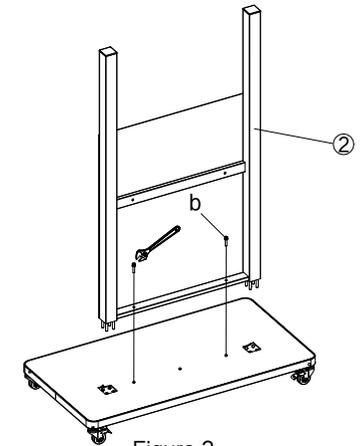


Figure 2

Step 3

Place the tray on the column assembly, use screw b to pass through the corresponding holes of the column assembly and lock it. (As shown in figure 3)

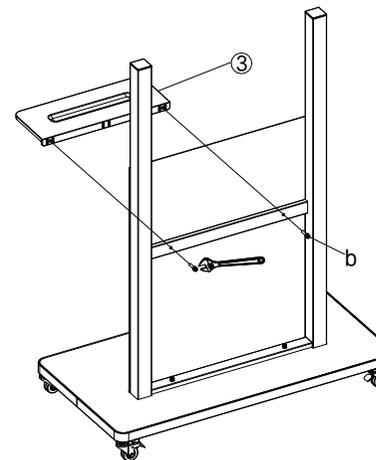


Figure 3

Step 4

Use c to lock the column assembly. (As shown in Figure 4)

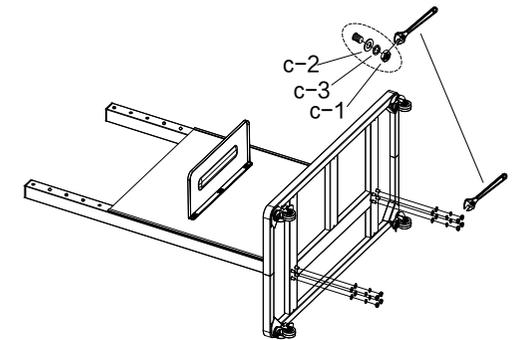


Figure 4

Step 5

Use screw d to lock the wall-mounted board on the columns.(As shown in figure 5)

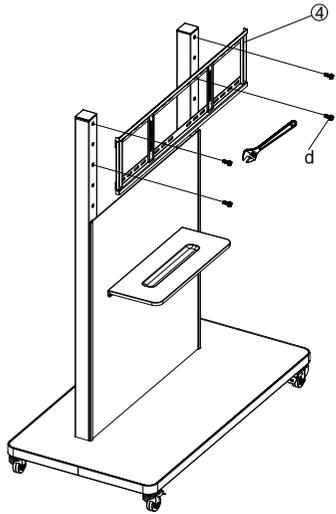


Figure 5

Step 6

Use screw d to attach the wall-mounting hanging strip to the IFP.(Only some models have this step)

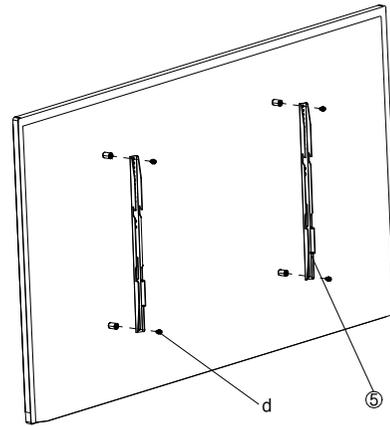


Figure 6

Step 7

Hang the IFP on the wall mounted board, and lock the safety screw e. (As shown in figure 6)
Ensure that the brakes are locked, This step requires at least 2 professionals to complete .

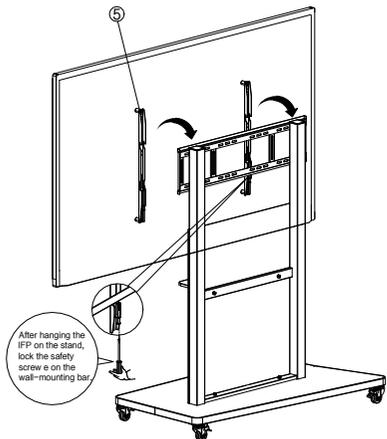


Figure 7

Step 8

Refer to the figure below for the effect after assembly.

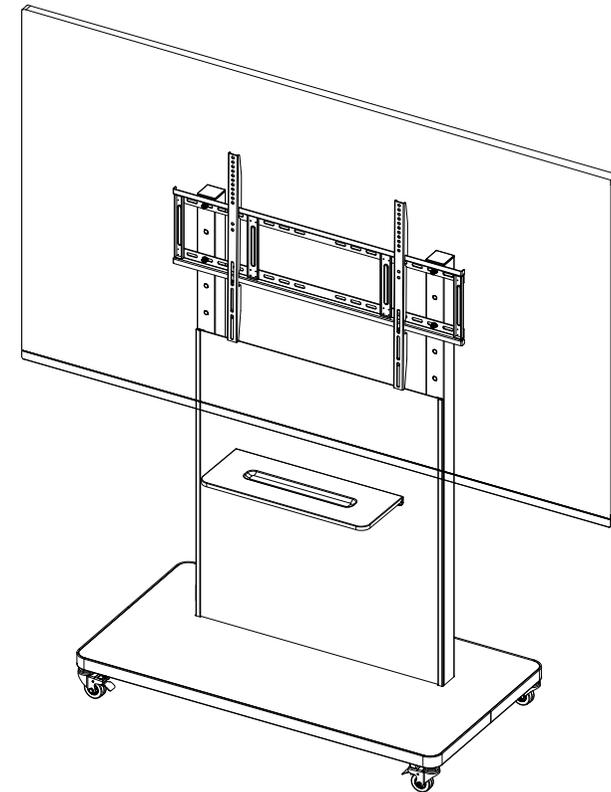


Figure 8